Daytime Running Lights (DRL)

From August 1999

Notes:

- *Information for*
- *Relay and fuse arrangements*
- *Connector arrangements*
- *Control Modules and Relays*
- *Ground connections*
- *⇒ Component Locations!*
- *Information for*
- *Troubleshooting Procedures*
- *⇒ Guided Fault Finding using VAS 5051/5052*

Edition 04.04

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

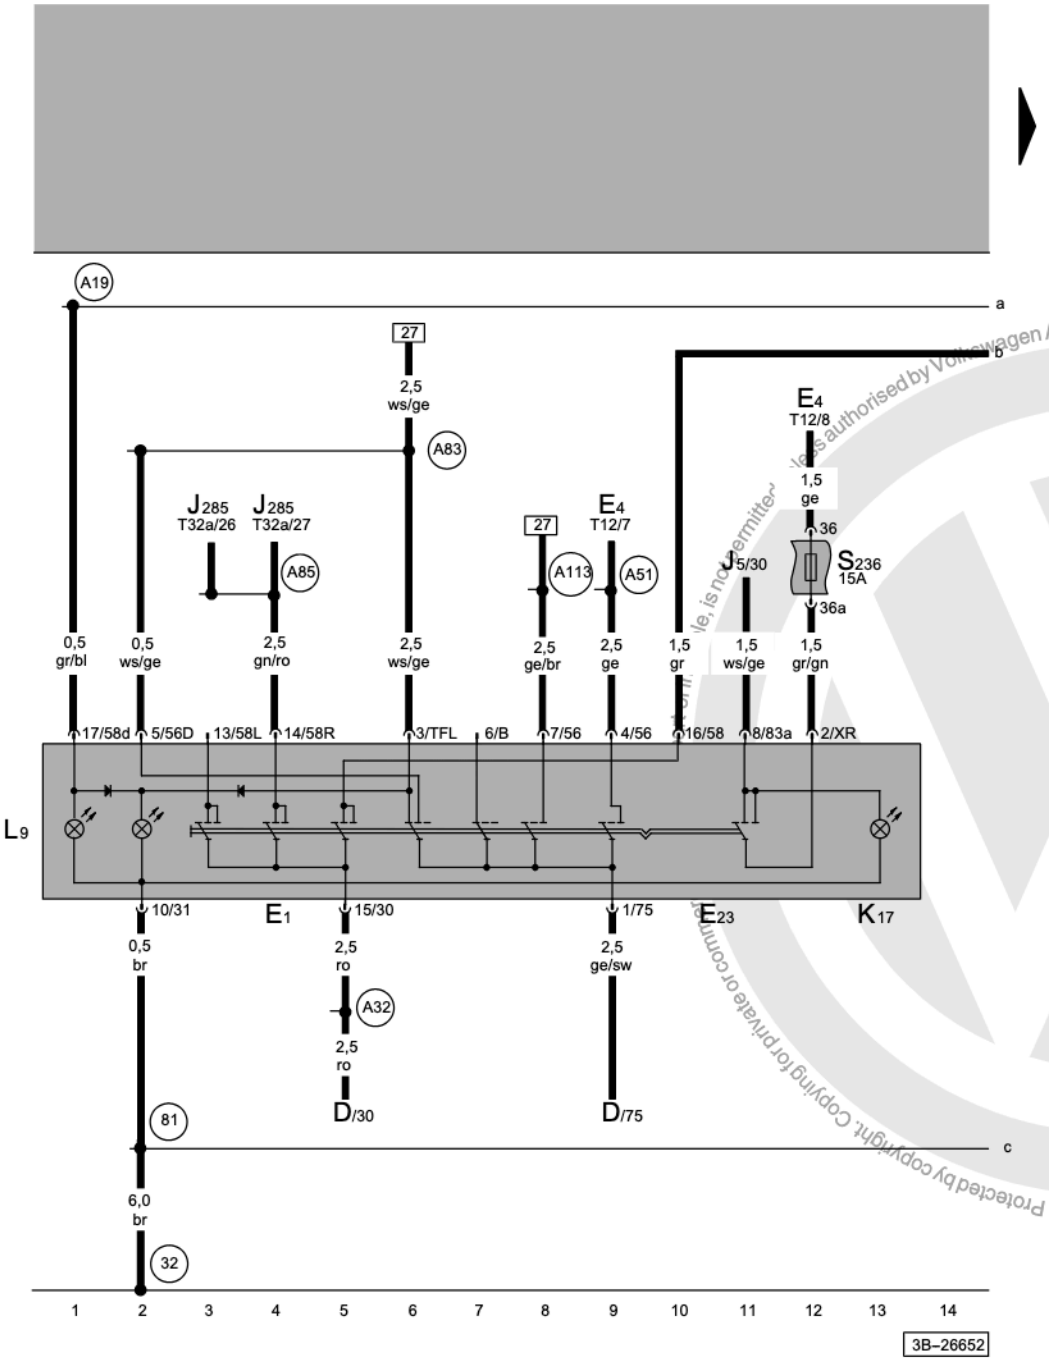

Light Switch

Edition04
.04

D	Ignition/Starter Switch
E1	Light switch
E4	Headlight Dimmer/Flasher Switch
E23	Fog Light Switch
J5	Fog Light Relay, on auxiliary relay panel, production control number (381)
K17	Fog Light Indicator Light
L9	Headlight Switch Light
S236	Fuse 36 in fuse holder
T12	12-Pin Connector
T32a	32-Pin Connector, blue, on instrument cluster
32	Ground connection, befind instrument panel, left
81	Ground connection -1-, in instrument panel wiring harness
A19	wire connection (58d), in instrument panel wiring harness
A32	plus connection (30), in instrument panel wiring harness
A51	wire connection (56) in instrument panel wiring harness
A83	Connection (daytime running lights), in instrument panel wiring harness
A85	Connection (58R) in instriment panel wiring harness
A113	Connection 2 (daytime running lights), in instrument panel wiring harness

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

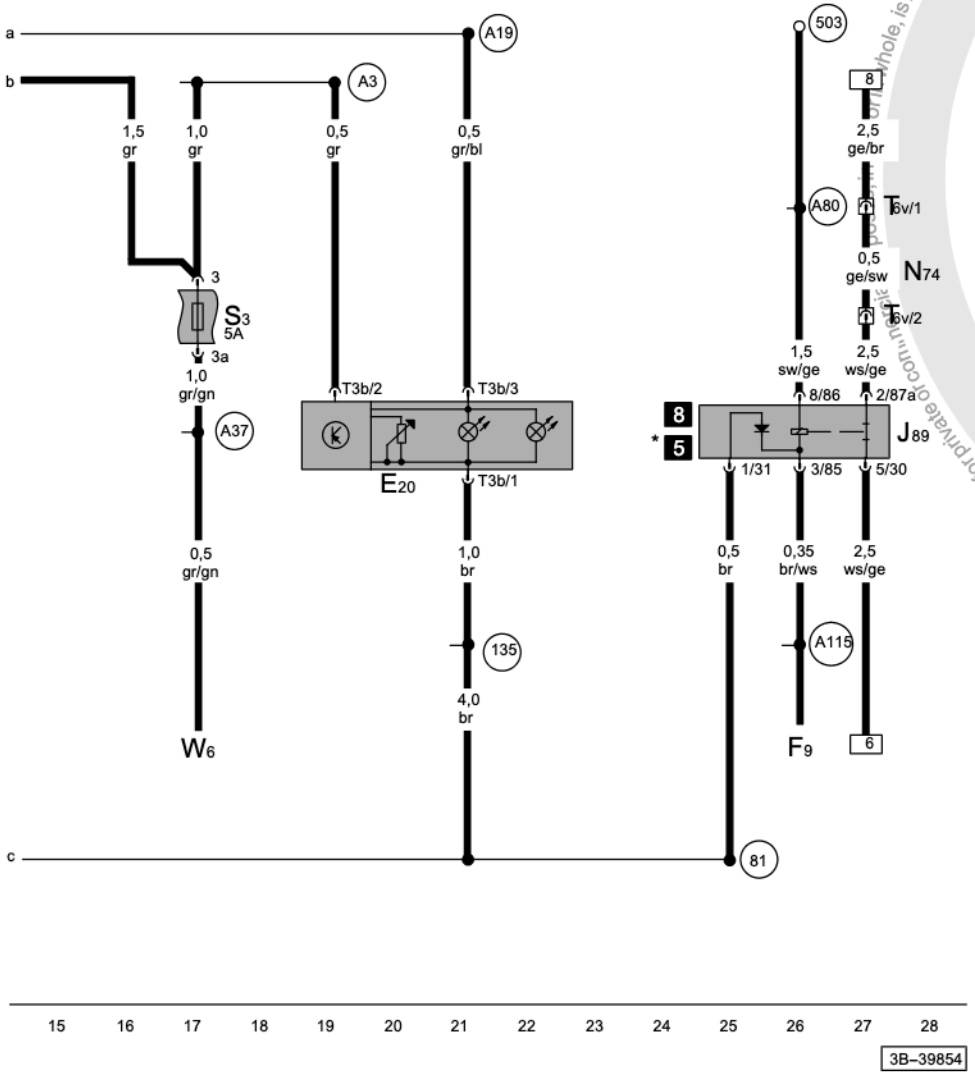

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
ge = yellow
or = orange
rs = pink

Instrument panel light dimmer switch, daytime running lights change-over relay

Edition04
.04

E20	Instrument Panel Light Dimmer Switch
F9	Parking Brake Warning Light Switch
J89	Daytime Running Lights Change-over Relay (173) on the thirteen position relay panel, above relay panel
N74	Series Resistance Wiring
S3	Fuse 3 in fuse holder
T3b	3-Pin Connector
T6v	6-Pin Connector, violet, connector station A-pillar, right
W6	Glove Compartment Light
81	Ground connection -1-,in instrument panel wiring harness
135	Ground connection -2-,in instrument panel wiring harness
503	Screw connection (75x), on relay panel
A3	plus connection (58), in instrument panel wiring harness
A19	wire connection (58d), in instrument panel wiring harness
A37	wire connection (58a), in instrument panel wiring harness
A80	Connection -1- (X), in instrument panel wiring harness
A115	- Connection (parking brake warning light), in instrument panel wiring harness
*	when equipped with Multi-Function Steering Wheel

Protected by copyright. Copying for private or commercial purposes, in whole or in part, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.